


Set-up hoist

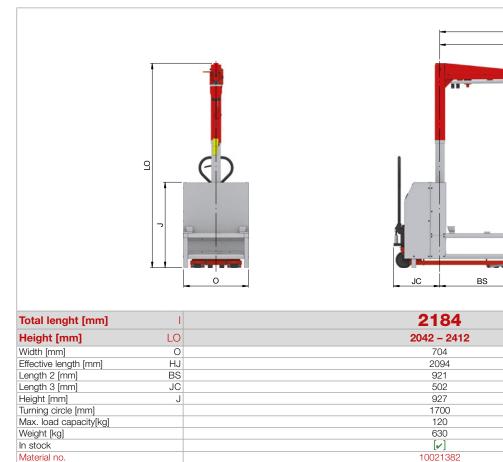

al lenght [mm]	I	2184		
ight [mm]	LO	2042 – 2412		
lth [mm]	0	704		
ctive length [mm]	HJ	2094		
gth 2 [mm]	BS	921		
gth 3 [mm]	JC	502		
ght [mm]	J	927		
ning circle [mm]		1700		
 load capacity[kg] 		120		
ght [kg]		630		
tock		[\nu]		
erial no.		10021382		

Accessories

Product	Description	In stock	Material no.
Monteq S mounting aid	For fast, easy, safe, and accurate centroteX S clamping device set-up	V	10015378
Monteq M mounting aid	For fast, easy, safe, and accurate centroteX M clamping device set-up	V	10000647
Monteq holder S	For the storage of Monteq S mounting aid	V	10023959
Monteq holder M	For the storage of Monteq M mounting aid	v	10023732
Cart	With push bar for transport of half-size Euro pallets, load capacity: 750 kg	~	10023270
Pallet	Half-size euro pallet with two rails for fastening of the clamping device holder, dim.: 600 x 800 x 170 mm	~	10021383
Clamping device holder	For storage and transport of a clamping device with centroteX flange on a pallet	~	10021384
Frames	Made of aluminum for half-size Euro pallets, dim.: 600 x 800 x 200 mm	V	10023268
Cover	Made of plastic for half-size Euro pallets, dim.: 600 x 800 mm	~	10023269
Handling Line Starter Set	Incl. 1x Pallet, 2x Clamping device holder, 2x Collars, 1x Cover	~	10023678

Interested?

Contact us for more details: Phone +49 7144.907-333 or sales@hainbuch.de



HANDLING LINE

Easy storage, transport and set-up of clamping devices

- Clamping devices are protected thanks to clean storage
- Clamping devices are always ready for the next task
- Flexible use on different machines
- Enables set-up even without a gantry crane





CLAMPING DEVICE HANDLING PERFECTLY TUNED

Efficient & clever – that's how a production process should be from start to finish. Providing »only« an outstanding clamping device is therefore not always enough.

With the HAINBUCH Handling Line you can set-up the right clamping device on your machine quickly and easily - and you can safely and securely stow away any clamping device you don't need.

Specifically, this means: store the clamping devices properly and **Products of the Handling Line:** clean on the pallet with the special clamping device holders, frames and the cover - this prevents soiling and the clamping devices retain their accuracy. Transport it on the pallet with the cart or the set-up hoist to the machine and set it up easily and back-friendly with the with the set-up hoist - without the need for a gantry crane.

This ensures a high durability of the clamping devices, a flexible use, facilitates the working method and saves time and thus also costs.

Your benefit

- Maintaining precision through clean storage
- Efficient and fast provision of the clamping devices
- Gentle operation thanks to lifting and mounting aid

- Pallet system with pallet, frames and cover
- Cart
- Set-up hoist
- Monteq mounting aid

STORAGE CLAMPING DEVICES STORED SAFELY AND SECURELY

... with the pallet system





Pallet with holders for clamping devices

including frames

TRANSPORT EFFICIENT MOVING OF CLAMPING DEVICES FROM A TO B

... with the cart or the set-up hoist






Remove clamping devices in pallet system from storage





SET-UP EASY ON THE BACK AND WITHOUT GANTRY CRANE

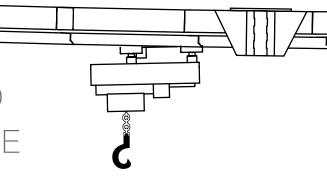

... with the set-up hoist





including cover







Move the clamping device securely to the machine











- All required clamping devices can be placed on the storage surface of the set-up hoist. A surface half the size of a Europallet is available for storage.
- → All clamping devices are then within easy reach during the set-up process

The set-up hoist with the clamping devices is positioned next to the machine. This might be machine A today and machine B tomorrow.

→ Designed for flexible use on different machines

Positioning of the set-up hoist in front of the machine. The swivel arm is extended without the clamping device to determine the perfect position.

 \rightarrow Swivel arm is more flexible than a gantry crane from above - ideal for hard-to-reach spindles

After lowering the set-up hoist, integrated safety prompts ensure a stable position and give the go-ahead for the actual set-up process.

→ No additional securing of the set-up hoist is necessary

With the swivel arm, pick up the clamping device from the storage surface, position on the spindle and mount → Reduce set-up times